

HUMZOR
NEXZDAS PRO

User's Manual

Shenzhen Hanzhi Technology CO.,Ltd.

Website: service@humzor.com
info@humzor.com

Email: www.humzor.com
www.humzor.cn

WhatsApp: +8619924486472

HUMZOR



NEXZDAS PRO

User’s Manual

NEXZDAS PRO USER MANUAL



Trademarks

HUMZOR®, NEXZDAS®, NEXZLINK®, and NEXZSCAN® are trademarks of Shenzhen Hanzhi Technology Co., Ltd., registered in China, the United States and other countries. All other marks are trademarks or registered trademarks of their respective holders.

Copyright Information

No part of this manual may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise without the prior written permission of

Disclaimer of Warranties and Limitaion of Liabilities

All information, specifications and illustrations in this manual are based on the latest information available at the time of printing.

HUMZOR reserves the right to make changes at any time without notice. While information of this manual has been carefully checked for accuracy, no guarantee is given for the completeness and correctness of the

HUMZOR will not be liable for any direct, special, incidental, indirect damages or any economic consequential damages (including lost profits).

⚠ IMPORTANT

Before operating or maintaining this unit, please read this manual carefully, paying extra attention to the safety warnings and precautions.

For Services and Support

www.humzor.com
www.humzor.cn

service@humzor.com
info@humzor.com

For details, please refer to the Service Procedures in this manual.

Safety Information

For your own safety and the safety of others, and to prevent damage to the device and vehicles upon which it is used, it is important that the safety instructions presented throughout this manual be read and understood by all persons operating or coming into contact with the device.

There are various procedures, techniques, tools, and parts for servicing vehicles, as well as in the skill of the person doing the work. Because of the vast number of test applications and variations in the products that can be tested with this equipment, we cannot possibly anticipate or provide advice or safety messages to cover every circumstance. It is the automotive technician's responsibility to be knowledgeable of the system being tested. It is crucial to use proper service methods and test procedures. It is essential to perform tests in an appropriate and acceptable manner that does not endanger your safety, the safety of others in the work area, the device being used, or the vehicle being tested.

Before using the device, always refer to and follow the safety messages and applicable test procedures provided by the manufacturer of the vehicle or equipment being tested. Use the device only as described in this manual. Read, understand, and follow all safety messages and instructions in this manual.

⚠ DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury to the operator or to bystanders.

⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to the operator or to bystanders.

⚠ SAFETY WARNINGS

- Always perform automotive testing in a safe environment.
- Wear safety eye protection that meets ANSI standards.
- Keep clothing, hair, hands, tools, test equipment, etc. away from all moving or hot engine parts.
- Operate the vehicle in a well-ventilated work area, for exhaust gases are poisonous.
- Put the transmission in PARK (for automatic transmission) or NEUTRAL (for manual transmission) and make sure the parking brake is engaged.
- Put blocks in front of the drive wheels and never leave the vehicle unattended while testing.
- Be extra cautious when working around the ignition coil, distributor cap, ignition wires and spark plugs. These components create hazardous voltages when the engine is running.
- Keep a fire extinguisher suitable for gasoline, chemical, and electrical fires nearby.
- Do not connect or disconnect any test equipment while the ignition is on or the engine is running.

- Keep the test equipment dry, clean, free from oil, water or grease. Use a mild detergent on a clean cloth to clean the outside of the equipment as necessary.
- Do not drive the vehicle and operate the test equipment at the same time. Any distraction may cause an accident
- Refer to the service manual for the vehicle being serviced and adhere to all diagnostic procedures and precautions. Failure to do so may result in personal injury or damage to the test equipment.
- To avoid damaging the test equipment or generating false data, make sure the vehicle battery is fully charged and the connection to the vehicle DLC is clean and secure.
- Do not place the test equipment on the distributor of the vehicle. Strong electro-magnetic interference can damage the equipment.

⚠ Warranty

Warranty Ordinance: Limited three months warranty for Tablet and two years warranty for NEXZDAS VCI . No Warranty Provided in Following Conditions:

1. Warranty service is not provided beyond the warranty period.
2. Product damage caused by incorrect installation or improper operation.
3. Self-modification, replacement of internal parts, and other man-madedamage, etc.
4. Product damaged by natural disasters, accidents, infiltration of liquids,etc

Contents

1. USING THIS MANUAL 8
1.1 CONVENTIONS 8

2. GENERAL INTRODUCTION 9
2.1 TABLET 9
2.2 VCCI-VEHICLE COMMUNICATION AND CHECK INTERFACE 13
2.3 SOFTWARE OVERVIEW 13

3. GETTING STARTED 14
3.1 POWER UP 14
3.2 POWER DOWN 16

4. SOFTWARE INSTALLATION AND RUNNING 17
4.1 SOFTWARE INSTALLATION 17
4.2 SOFTWARE RUNNING 17

5. PRODUCT REGISTRATION AND LOGIN 17
5.1 USER REGISTRATION 17
5.2 LOGIN 18
5.3 BLUETOOTH CONNECTION 21

6. DIAGNOSTICS 22
6.1 ESTABLISH VEHICLE COMMUNICATION 22
6.2 PROTOCOL SUPPORTED 22
6.3 GETTING STARTED 23

7. SPECIAL FUNCTION 32

8. KEY PROGRAMMING 34

9. APP STORE 35
9.1 VEHICLE DAS DOWNLOAD 35
9.2 SPECIAL FUNCTION DOWNLOAD 36
9.3 KEY PROGRAMMING DOWNLOAD 37

10. DTC QUERY 37

11.VIN QUERY 38

12. PERSONAL 39
12.1 EDITING PERSONAL INFORMATION 39
12.2 UPGRADE 39
12.3 PRODUCT SERIAL NUMBER SWITCH 41
12.4 LOG OUT 41
12.5 REMOTE ASSISTANCE 41

13. FEEDBACK 42

14.SETTINGS **43**
14.1 SYSTEM INFO 43
14.2 UNITS 43
14.3 SEARCH ENGINE 44
14 4 RUN MODE 44
14.5 LANGUAGE 44

15. OTHER **45**
15.1 DATA PLAYBACK 45
15.2 DATA MANAGE 45

16. NAVIGATION BAR **47**
16.1 RECORD VIDEO 47
16.2 SCREENSHOT 48

1. Using This Manual

This manual contains device usage instructions.
Some illustrations shown in this manual may contain modules and optional equipment that are not included in your system.

1.1 Conventions

The following conventions are used.

1.1.1 Bold Text

Bold text is used to highlight selectable items such as buttons and menu options.

- Tap NEXT

1.1.2 Notes and Important Messages

A NOTE provides helpful information such as additional explanations, tips, and comments.
The IMPORTANT indicates a situation that if not avoided may result in damage to the tablet or vehicle.

1.1.3 Illustrations

Illustrations used in this manual are samples, and the actual testing screen may vary for each vehicle being tested. Observe the menu titles and on-screen instructions to make correct option selection.

1.1.4 Procedures

An arrow icon indicates a procedure.

Example:

► To use the Feedback:

1. Tap the Feedback button. The customer can feedback the software bug to engineer.
2. Select the vehicle brand and type.
3. Describe software problem found or customer requirement in the edit box. Or select the image for the tablet.
4. Tap the NEXT to send the feedback to engineer.
5. Tap the Back or Home button to exit the feedback application.

2. General Introduction

The NEXZDAS PRO ND366 is a multi-platform diagnostic solution comprised of a powerful 9.6/10.1 inch TFT-LCD touchscreen Android-based tablet, a NEXZBOX communication and diagnostic measurement unit and an on-tool and cloud-based repair instructions and expert advice. As an intelligent diagnostic and information system, NEXZDAS PRO ND366 not only displays the relevant repairs gathered from experienced industry experts, but provides step-by-step guidance to ensure the repair is done correctly and efficiently.

There are two main components to the NEXZDAS PRO ND366 system:

- NEXZDAS Tablet – the central processor and monitor for the system.
- NEXZBOX VCCI - Vehicle Communication and Check Interface.

This manual describes the construction and operation of these devices and how they work together to deliver diagnostic solutions.

2.1 Tablet

2.1.1 Functional Description



Figure 2-1 NEXZDAS Table Front View

1.9.6/10.1 incn TFT-LCD Capacitive Touchscreen
2. Front Camera
3. Built-in Microphone

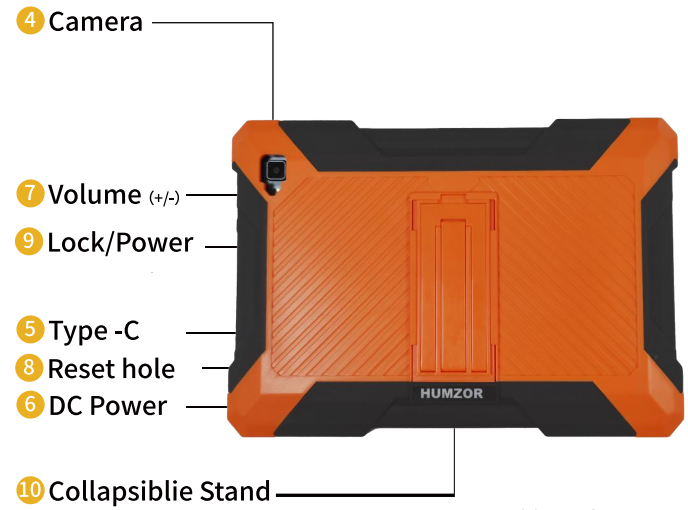

Figure 2-2 NEXZDAS Table Back View

4. Back Camera
5. Type-C charging port
6. DC Power supply input port
7. Volume button for up and down
8. Reset button for restart tablet
9. Power button
10. Collapsible Stand- extends from the back to allow hands-free viewing of the tablet



Figure 2-3 NEXZDAS CollapsibleStand

2.1.2 Power Source

The tablet can receive power from any of the following sources:

- Internal Battery Pack
- AC/DC Power Supply

⚠ IMPORTANT

Do not charge the battery when the temperature is lower than 0°C (32°F) or higher than 45°C (113°F).

Internal Battery Pack

The tablet can be powered with the internal rechargeable battery, which if fully charged can provide sufficient power for about 8 hours of continuous operation.

AC/DC Power Supply – using power adapter

The tablet can be powered from an electrical outlet using the AC/DC power adapter. The AC/DC power supply also charges the internal battery pack.

2.1.3 Technical Specifications

Table 2-1 Tablet and VCCI Specifications -1

Product Parameters		
Appearance	Size	250.1*171*7.8mm
Accessories	LCD specification	9.6/10.1 inch 800*1280/1200*1920
	TP specification	G+G, COB/COF compatible with 5-10point
	Camera	Front: 2M/5M (compatible with0.3M) Rear5M/Rear8M/Rear13M ;With flash (true and false flash compatible)
	Number of keys	3 physical buttons: Power (long press to turn off), Volume +/-; Software implementation: Return, Home
	Battery capacity	4000mAh
	Charger specification	5V/2A type-C
	Earphone specification	3.5mm I version earphone LRGM
	Data wire	Type-C

Table 2-1 Tablet and VCCI Specifications -2

Hardware specifications		
Hardware platform	MTK6763	8 core ARM Cortex
RAM:	LPDDR4+EMMC	LPDDR4+EMMC
SIM card:	Double SIM card	Double SIM card
Accessories	Data link	4G:LTE-TDD;LTE-FDD; 3G:HSPA+ , HSDPA 21M, HSUPA 5.76M;1X+EVDO 2G:GPRS class 12/EDGE
	Wi-Fi	IEEE 802.11b/g/h
	Bluetooth 5.0	Supported
Temperature	Operating Temp	0 to 50°C (32 to 122°F)
	Storage Temp	-20 to 60°C (-4 to 140°F)

Table 2-1 Tablet and VCCI Specifications-3

Software specifications	
Software platform:	Android 9.0
Interface style	Google
Language	Support multi-languages
Input	Standard Android soft keyboard (support third-party handwriting input method/support external hard keyboard)
Audio:	MP3,MP2, AMR,AWB,APE,M4A, MIDI, OGG,WAV,FLAC,3GP (Need License: AAC, WMA)
Video:	MPEG4-SP, H.264/AVC,H.263,3GP,3G2,MP4,MKV,AVI,1080P
Protocols	PLC J2497, ISO-15765, SAE-J1939, ISO-14229 UDS, SAE-J2411 Single Wire Can(GMLAN), ISO-11897-2, ISO-11897-3, SAE-J2819 (TP20),TP16, ISO-9141, ISO-14230, SAE-J2610 (Chrysler SCI), UART Echo Byte, SAE-J2809 (Honda Diagnose-H), SAE-J2740 (GM ALDL), SAE-J1567 (CCD BUS), Ford UBP, Nissan DDL UART with Clock, BMW DS2, BMW DS1, SAE J2819 (VAG KW81), KW82, SAE J1708, SAE-J1850 PWM (Ford SCP), SAE-J1850 VPW (GM Class2)

2.2 VCCI – Vehicle Communication and Check Interface

2.2.1 Functional Description

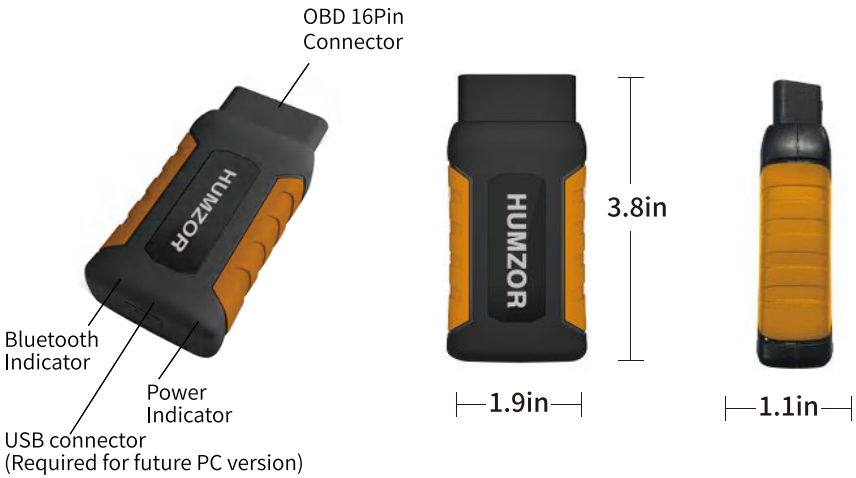

Figure 2-4 HUMZOR VCCI Top View

2.3 Software Overview

2.3.1 Overview

NEXZSYS is a tool-based APP which focus on car diagnosis, reset, key programming and other maintenance functions. It is connected to the vehicle through a specific Bluetooth (V5.0) device. The car owner or maintenance worker can learn the basic information and the existed faults of the vehicle in real time through the APP, etc., making vehicle maintenance become more convenient.

2.3.2 Features

1. Wide coverage of gasoline vehicle brands of Asia, Europe and America, free download.
2. Support full-system electronic control diagnosis, quickly scan the conditions of all electronic control systems of the car, and then generate professional diagnosis report
3. Special customization, special functions are supported, such as Oil reset, TPMS, EPB, etc.
4. Support online DTC Query, Remote Assistance, one-click to feedback, screenshot, screen recordin

2.3.3 Performance

The software is easy to operate and reliable, guarantees the authenticity and security of information.

3.Getting Started

Make sure the tablet has sufficient power or is connected to the external power supply.

3.1 Power Up

The system boots up and shows the main interface with 3 entry functional area:



Figure 3-1 Application Menu

1. Application Buttons - Diagnose and application functions selection.
2. Locator and Navigation Buttons – Quickly boot to diagnose function or return android system home.
3. Status Icons - Display system and communication signals.

⚠ NOTE

It is recommended to lock the screen when not in use to protect information in the system and conserve the power.

Almost all operations on the tablet are controlled through the touchscreen. The touchscreen navigation is menu driven allowing for quick access to test procedure, or data that you need, through a series of questions and options. Detailed descriptions of the menu structures are found in the chapters for each application.

3.1.1 Application Buttons

The table below briefly describes each of the applications in the NEXZSYS system.

Name	Button	Description
Car Diagnostics		Accesses the unit's
Heavy-duty Diagnostics		Accesses the unit's Heavy-duty
Special Function		Accesses special functions menu
IMMO Key		Accesses Key programming and IMMO Reset
DTC Query		Accesses special functions menu
VIN Query		Accesses the VIN Query functions.
APP Store		Accesses system software update menu.
Personal		Accesses saved consumer information and change data live unit, upgrade NEXZDAS system application, logo in/out system and switch/add
Settings		Accesses the system settings menu and general tablet menu.
Remote Ass		Configures your unit to receive remote support using the TeamViewer application.
Feedback		Collect the customer requirement or question to engineer team.
Others		Accesses valuable application Data Management, data playback and so on.

3.1.2 Locator and Navigation

Operations of the Navigation buttons at the bottom of the screen are described in the table below:

Button	Description	Button	Description
	Record user operation process and communication data.		Switch to small floating window
	take ascreenshot and save the picture.		Return to the Main Interface of the APP
	Displays the connection status of the tablet to VCCI.		Enter to Diagnosis Interface
	Return to the previous interface		Enter to Special Function Interface
	Return to the main interface of the tablet		Enter to Key Programming Interface

3.2 Power Down

All vehicle communications should be terminated before shutting down the tablet. A warning message displays if a shutdown is attempted while the tablet is communicating with the vehicle.

Forcing a shut down while the tablet is communicating with the vehicle may lead to ECU errors on some vehicles.

Please exit the Diagnostics application before shutting off the tablet.

► To power down the NEXZSYS tablet

1. Long press (press and hold) the Lock/Power Button.
2. Tap Power off option.
3. Tap OK.

3.2.1 Reboot System

In case of system crash, long press the Lock/Power button and tap reboot to restart the system.

4.Software Installation and Running

4.1 Software Installation

The tablet comes with NEXZSYS software at the factory
NOTE: Do not delete this software or install the mobile version of NexzDAS App on this tablet, so as not to cause inconveniences such as unsuitable interface.

4.2 Software Running

The user clicks on the NEXZSYS icon to enter the system.



Figure 4-1 Sample Application Home

5. Product Registration and Login

5.1 User Registration

When you access the "NEXZSYS " application for the first time, you need to follow the steps below to register:

1. Click the "NEXZSYS " icon on the desktop to open the application.
2. On the Login interface, click the "Register" button to enter the registration interface.
3. Enter your mailbox or mobile phone number in the "Email" column.
4. Click the "GET CAPTCHA" button to get your captcha.
5. Enter the captcha you obtained in the "CAPTCHA" column.
6. Set up your password in the "Enter password" field, and enter your password again in the "Confirm Password" field.
7. Click the "->" button at the bottom, once your email account, captcha, and password format are entered correctly, then the registration will be successful.

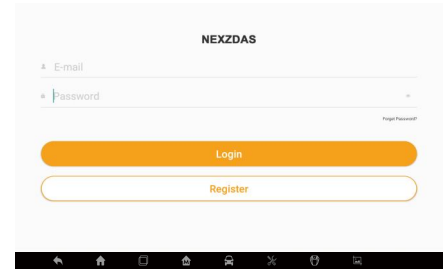

Figure 5-1 Sample Login and Registration

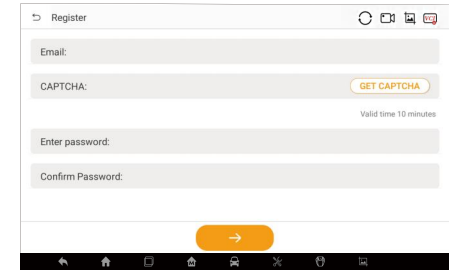

Figure 5-2 Sample Registration Interface

5.2 Login

Users who have registered can log in through the following steps:

1. Click the "NEXZSYS " icon on the desktop to open the application.
2. On the Login registration interface, enter the email or mobile number you need to log in in the "E-mail" column.
3. Enter your login password in the "Password" column.
4. Click the icon on the right side of the "Password" column to encrypt your password, and the icon becomes . Click the icon on the right side of the "Password" column to display your password, and the icon will turn into .
5. Click the "Login" button. Once you have entered the correct account and password, then login will be successful and the system will guide you to the serial number binding and selection interface.

5.2.1 Change Password

If you forget your password or need to set a new password, you can follow the steps below:

1. Click the "NEXZSYS " icon on the desktop to open the application.
2. On the login and registration interface, click the "Forget Password?" button to enter the password reset interface.
3. Enter your login account in the "Account" field.
4. Click the "GET CAPTCHA" button to get your captcha.
5. Enter the captcha you obtained in the "CAPTCHA" field.

6. Enter your new password in the "Input the new password" field, and enter your new password again in the "Input the Password again" field.
7. Click the "->" button at the bottom, once your account, captcha, and password format are entered correctly, then the new password is set successfully.

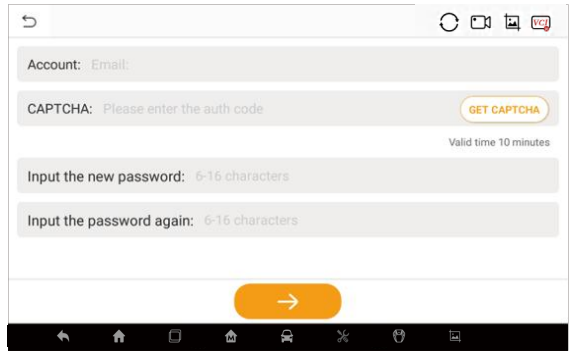

Figure 5-3 Sample Password Reset Interface

5.2.2 Serial Number Binding

After the user logs in successfully, it comes to the serial number binding interface. Users can add, delete, and select products here.

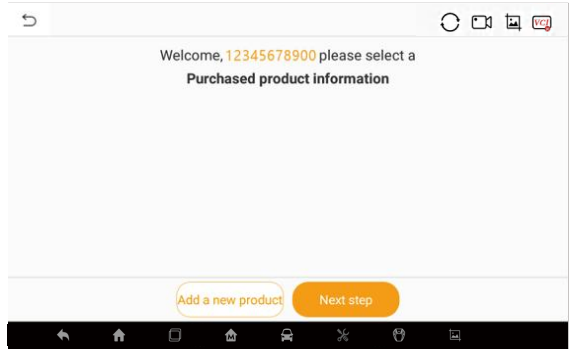

Figure 5-4 Sample Binding Serial Number Interface

5.2.3 Product Binding

1. Manually input

A. Click the "Add a new product" button and the "Binding serial number" interface will pop up.
B. Enter the serial number (S/N) of the device you purchased in the "Serial number" field, and enter the Activation code of the device in the "activation code" field.
C. Click the "Okay" button. If the serial number and activation code you entered are consistent with the serial number and activation code of the purchased device, the binding is successful.

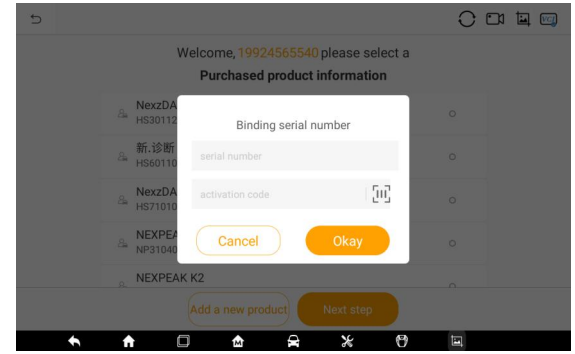

Figure 5-5 Sample Binding Serial Number Interface

2. Scan code to binding

A. Click the "Add a new product" button and the "Binding serial number" interface will pop up.
B. Click the scan code icon on the right side of the "activation code" column to open the scan interface.
C. Align the QR code of the device you purchased, and if the code is scanned successfully, the serial number will be automatically bound.

5.2.4 Product Deletion

If you need to delete the serial number, swipe your finger to the left on the row of the serial number that needs to be deleted, and click the "Delete" button that slides out to successfully delete the serial number.

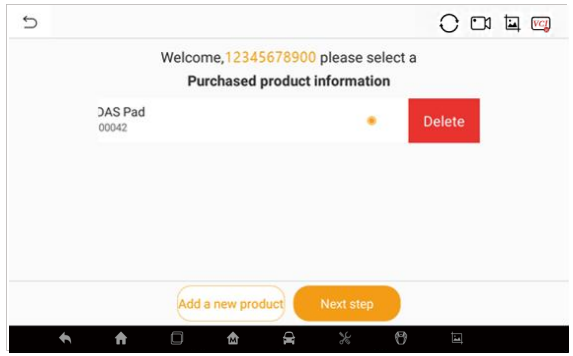

Figure 5-6 Sample Delete Serial Number

5.2.5 Product Selection

1. Click the product serial number you need to enter, and the icon on the right becomes .

2. Click the "Next step" button and the system will guide you to the main interface of "HUMZOR".

5.3 Bluetooth Connection

After you select the product serial number to enter the "HUMZOR" main interface, you can view and connect to the VCI device with the corresponding serial number you have purchased through the following steps:

1. Insert the VCI of the HUMZOR NEXZDAS product you purchased tightly into the OBD port. At this time, the Bluetooth icon on the top right side is.

2. Turn on the ignition switch, the NEXZSYS application will automatically scan and recognize the VCI device, and establish a Bluetooth connection. At this time, the Bluetooth icon on the top right side changes to , and the Bluetooth connection is successful.

3. If the NEXZSYS application cannot automatically connect to your VCI device, or the device fails to connect, please click the icon button on the top right to reconnect, or check whether the VCI is well connected to the car's OBD port.



Figure 5-15 Not Connected



Figure 5-16 Connected

6.Diagnostics

The Diagnostics application can access the electronic control module of multiple vehicle control systems, including but not limited to the engine, transmission, antilock brake system (ABS) and airbag system (SRS).

6.1 Establish Vehicle Communication

The Diagnostics operations require connecting the NEXZDAS PRO Diagnostic tablet to the test vehicle through the VCCI device using the Main Cable. (Use the applicable OBDI-type adapter if needed). To establish proper vehicle communication to the tablet, you need to perform the following steps:

1. Connect the VCCI device to the vehicle's DLC for both communication and power source.

2. Connect the VCCI device to the tablet via BT auto-pairing, Wi-Fi or USB connection.

3. When the above steps are completed, check the VCCI navigation button at the bottom bar on the screen. If a blue BT, Wi-Fi or USB icon displays at the lower right corner, the Diagnostic Platform is ready to start vehicle diagnosis.

6.2 Protocol Supported

The following protocols are included:

High Speed CAN - offers baud rates from 40 Kbit/s to 1 Mbit/sec, depending on cable length. This is the most popular standard for the physical layer, since it allows for simple cable connection between devices. High speed CAN networks are terminated with 120 ohm resistors on each end of the networ

Low Speed CAN - offers baud rates from 40 Kbit/s to 125 Kbits/sec. This standard allows CAN bus communication to continue in case of a wiring failure on the CAN bus lines. In low speed CAN networks, each device has its own termination.

Single CAN - offers baud rates up to 33.3 Kbit/s (up to 88.3 Kbit/s for high-speed mode)

J1939 CAN - is used in the commercial vehicle area for communication throughout the vehicle with the physical layer defined in ISO 11898. Under J1939/11 and J1939/15, the data rate is specified as 250 Kbit/s, with J1939/14 specifying 500 Kbit/s.

J1850 (PWM) - SAE J1850 pulse-width modulation offers baud rates up to 41.6 Kbit/s, standard of the Ford Motor Company

J1850 (VPW) - SAE J1850 variable pulse width offers baud rates up to 10.4 Kbit/s, standard of the General Motors

J1708 (SAE) - the standard defines a double-wire 18-gauge cable that can run up to 130 feet (40 m) and operates at 9600 bit/s

6.3 Getting Started

Prior to first use of the Diagnostics application, ensure the VCCI device is properly connected to and is communicating with the tablet.

6.3.1 Vehicle Menu Layout

For example:
Click on Car Diagnosis->EUROPE->BMW->Vehicle Manual Select->NEXT->Diagnose->Quick Test.

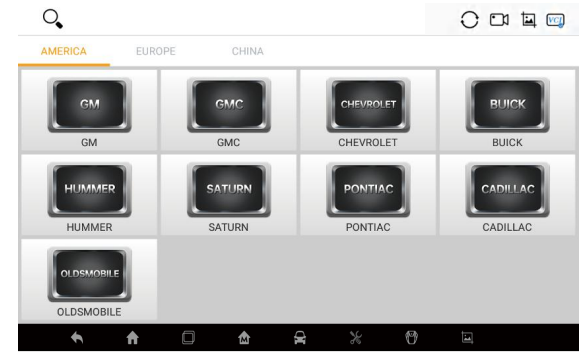

Figure 6-1 Sample Vehicle Menu Screen

Manufacturer Buttons

The Manufacturer buttons display the various vehicle brand names. Select the manufacturer button after the VCCI device is properly connected to the test vehicle to start a diagnostic session.

Select EUROPE->BMW brand to check.

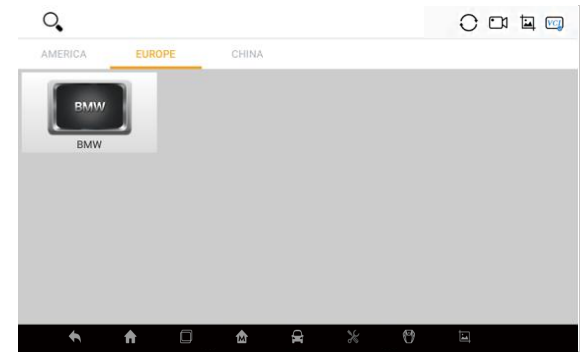

Figure 6-2 Sample BMW brand

6.3.2 Vehicle Identification

The NEXZSYS diagnostic system supports two methods of Vehicle Identification.

1. Vehicle Manual Select
2. Vehicle Select by VIN

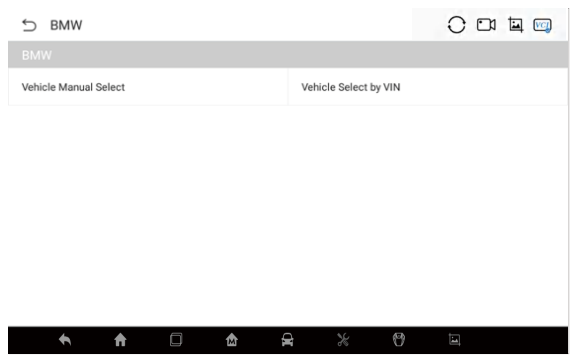

Figure 6-3 Sample Diagnostic Menu Selection

6. 3.2.1 Vehicle Manual Select

For vehicles that do not support the Auto VIN diagnose function, the NEXZSYS diagnostic system allows you to enter the vehicle brand manually.

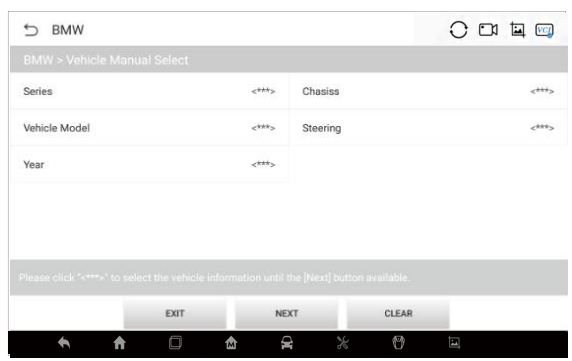

Figure 6-4 Sample Manual Selection

6.3.2.2 Vehicle Select by VIN

The NEXZSYS diagnostic system features the latest VIN-based Auto VIN Scan function to identify CAN vehicles with just one tap, enabling the technician to quickly identify the exact vehicle and scan its available systems for fault codes.

Click on BMW and the system will acquire VIN information automatically or allow users to input the VIN manually.

► To perform Manual Input

1.Tap the Diagnostics application button from the Menu. The Vehicle Menu displays.

2.Select Manual input.

3.Tap the input box and enter the correct VIN code or license numbers.

4.Tap ENTER. The vehicle will be identified and matched to the vehicle database and the Vehicle Diagnostics screen will display.

5. Tap the cross icon on the top right corner to exit Manual Input.



Figure 6-5 Sample Auto VIN Selection

After the vehicle information is selected. Tap the NEXT button at the bottom right corner of the screen (See Figure 6-7) to open the Main menu page. This section consists of various functions commonly used, including quick test, Control Unit, and more. The available functions displayed vary by vehicle.

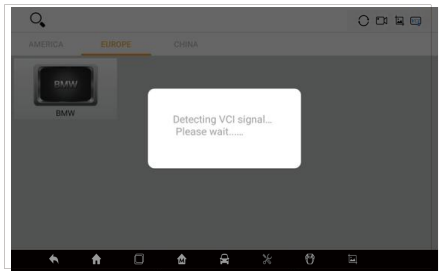

Figure 6-6 Sample Communication

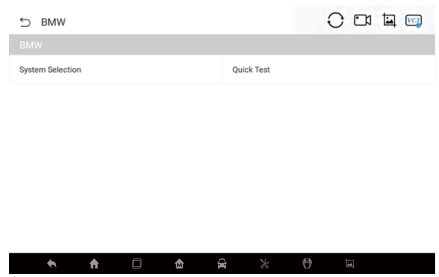

Figure 6-7 Sample System Test mode

6.3.3 Quick Test

The Quick Test function performs a comprehensive scanning of all the systems in the vehicle ECU to locate faults and retrieve DTCs. Tap Fault to start. Systems with no faults detected will display √; systems containing faults will display the numbers of the faults, such as DTC[2].

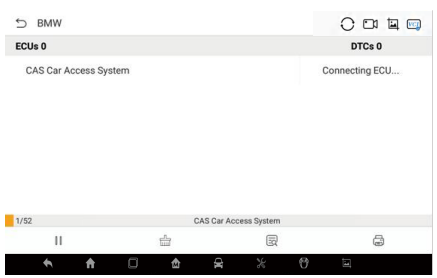

Figure 6-8 Sample Quick Test Screen

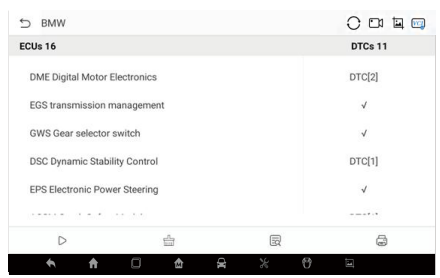

Figure 6-9 Sample Quick Test Result Screen

6.3.4 Control Unit

This option allows you to manually locate a required control system for testing through a series of choices. Simply follow the menu driven procedure, and make proper selection each time; the program will guide you to the diagnostic function menu after a few choices you've made

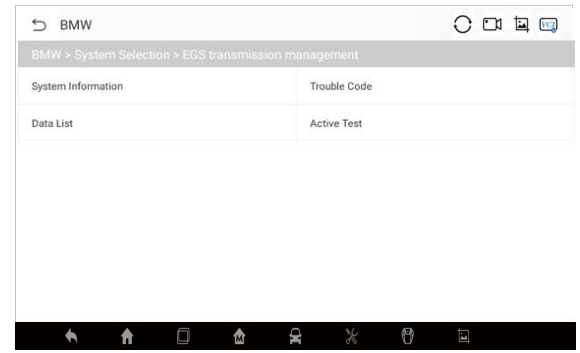

Figure 6-10 Sample Auto VIN Selection

Available functions may vary by vehicle. The function menu may include:

- System information – displays detailed ECU information. Select to display information screen.
- Trouble codes – contains Read Codes and Erase Codes. The former displays detailed DTC information retrieved from the vehicle control module, the latter facilitates you to erase DTCs and other data from the ECU.
- Live data – retrieves and displays live data and parameters from the vehicle's ECU.
- Active test – provides specific subsystem and component tests. This selection may display as Actuators, Actuator Test, or Function Tests. Available tests vary by vehicle
- Special functions – provides component adaptation or variant coding functions for custom configurations, and allows entry of adaptive values for certain component after repairs. Depending on the test vehicle, this selection may sometimes appear

6.3.5 ECU Information

This function retrieves and displays the specific information for the tested control unit, including unit type and version numbers.



Figure 6-11 Sample ECU Information Screen

6.3.6 Trouble Code

6.3.6.1 Read Code

This function retrieves and displays the DTCs from the vehicle control system. The Read Codes screen varies for each vehicle being tested. For some vehicles, freeze frame data can also be retrieved for viewing. A sample Read Codes screen displays as below:

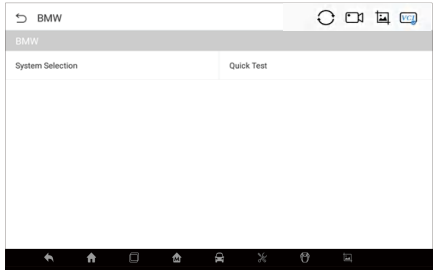

Figure 6-12 Sample Read DTCs Screen

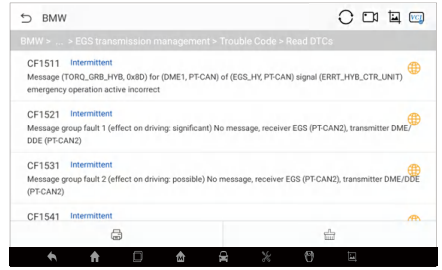

Figure 6-13 Sample Read DTCs Screen

- **Freeze Frame** – icon displays when freeze frame data is available for viewing; Tap icon to display data screen. The Freeze Frame interface is similar to that of the Read DTCs interface and share similar operations
- **Search** – tap to search the selected DTC for additional information on the Internet.

- **Clear DTCs** – tap to erase codes from the ECU. It is recommended that DTCs are read and needed repairs are performed before erasing codes.
- **Read DTCs** - retrieves and displays the DTCs from the vehicle control system. The Read Codes screen varies for each vehicle being tested.

6.3.6.2 Erase Codes

After reading the retrieved codes from the vehicle and certain repairs have been made, you can erase the codes from the vehicle using this function. Before performing this function, make sure the vehicle's ignition key is in the ON (RUN) position with the engine off.

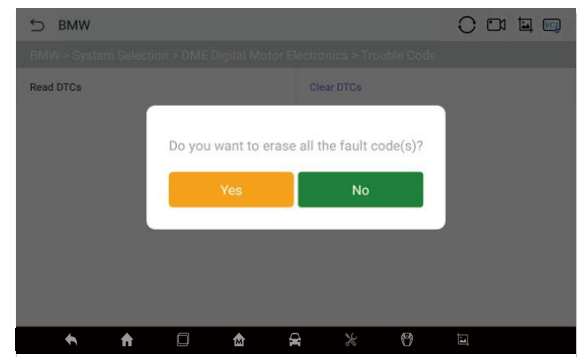

Figure 6-14 Sample Clear DTCs Screen 1

▶ To perform Manual Input

1. Tap Clear Codes in the Function Menu.
2. A warning message displays to inform you of data loss when this function is applied.

a) Tap YES to continue. A confirming screen displays when the operation is successfully done.
b) Tap NO to exit.

3. Tap ESC on the confirming screen to exit Erase Codes.
4. Check the Read Codes function again to ensure the operation is successful

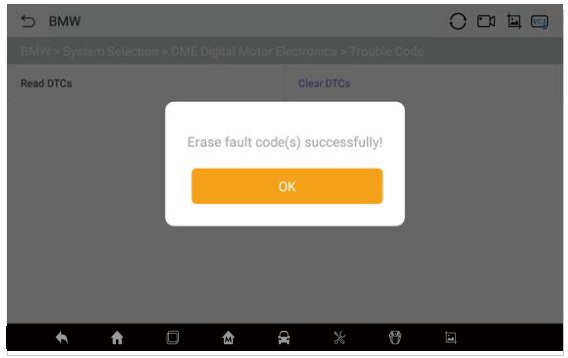

Figure 6-15 Sample Clear DTCs Screen 2

6.3.7 Erase Codes

When this function is selected, the screen displays the data list for the selected module. The parameters display in the order that they are transmitted by the ECU, so expect variation among vehicles.

Gesture scrolling allows you to quickly move through the data list. Touch the screen and drag your finger up or down to reposition the parameters being displayed if the data occupies more than one screen. The figure below displays a typical Live Data screen:

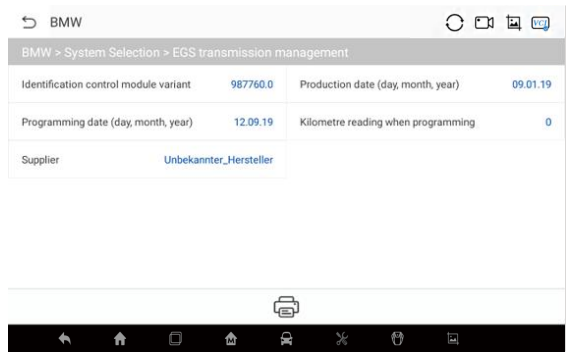

Figure 6-16 Sample Live Data Screen

6.3.8 Active Test

The Active Test function is used to access vehicle-specific subsystem and component tests. Available tests vary by vehicle

During an active test, the tablet sends commands to the ECU to activate the actuators. This test determines the integrity of the system or part by reading ECU data, or by monitoring the operation of the actuators. Such tests may include switching a solenoid, relay, or switch, between two operating states

Selecting Active Test displays a menu of test options. Available tests vary by vehicle. Select test from menu option. Follow the instructions displayed on screen to complete test. Procedures and instructions vary by vehicle.

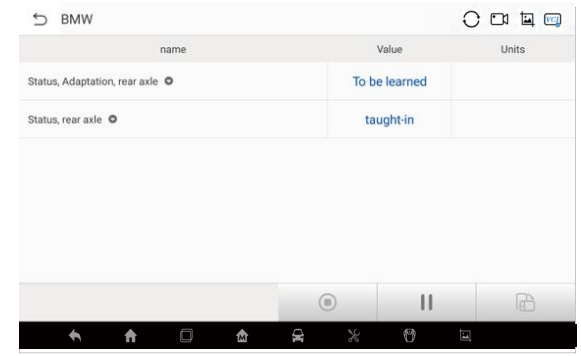

Figure 6-17 Sample Active Test Screen

The functional buttons in the lower right corner of the Active Test screen manipulate the test signals. The operational instructions are displayed in the main section of the test screen. Follow the on-screen instructions and make appropriate selections to complete the tests.

Tap the ESC functional button to exit the test when finished.

7.Special Function

These functions perform various component adaptations, including the recalibrate or configuration of certain components after repairs or replacements have been completed.

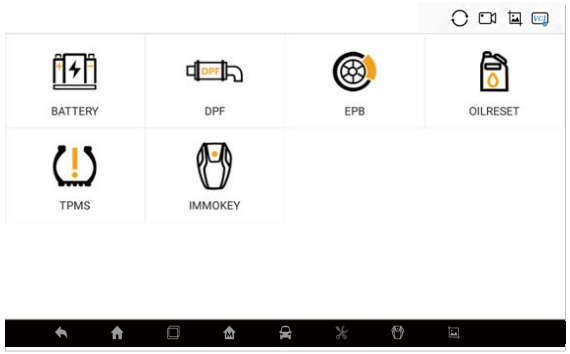

Figure 7-1 Sample Special Function Screen 1

For example:
Click on Special Function->BATTERY->Europe->BMW, interface as image such as

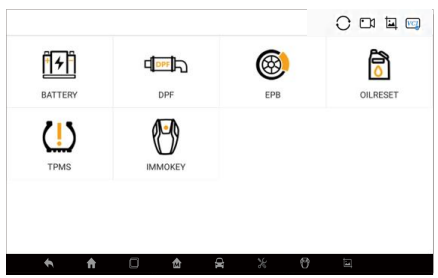

Figure 7-2 Sample Special Function Screen 2

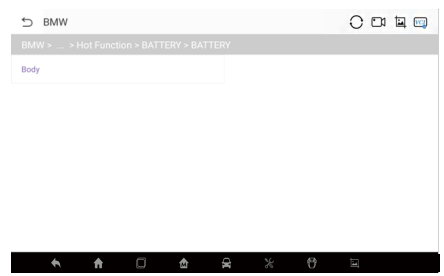

Figure 7-3 Sample Special Function Screen 3

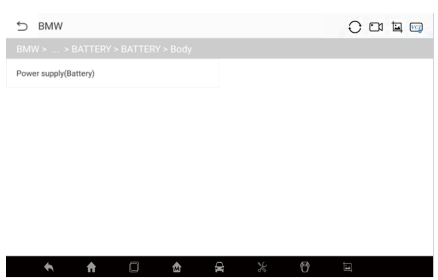

Figure 7-4 Sample Special Function Screen 4

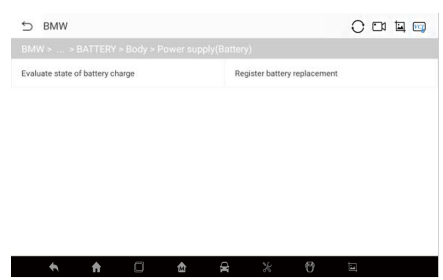

Figure 7-5 Sample Special Function Screen 5

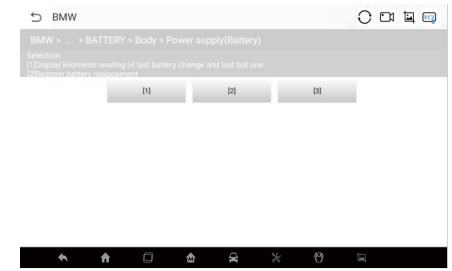

Figure 7-6 Sample Special Function Screen 6

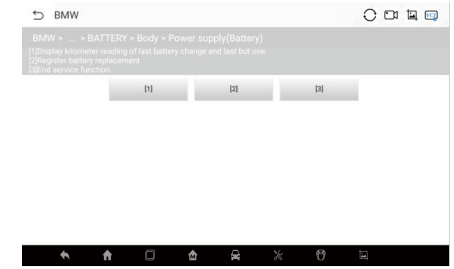

Figure 7-7 Sample Special Function Screen 7

8. Key Programming

These functions perform various key programmer, including add and erase keys, reset immobilizer, replace engine or immobilizer ECU, and so on.
For example：Click on Key Programming ->ASIA->HYUNDAI->Agree->Calculator->Security code calculator.

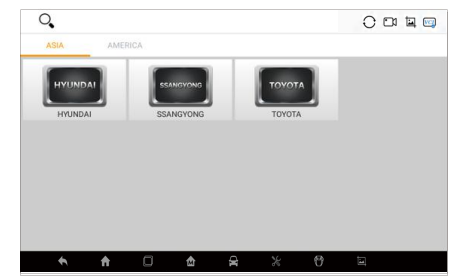

Figure 8-1 Sample Key Programmer Screen 1

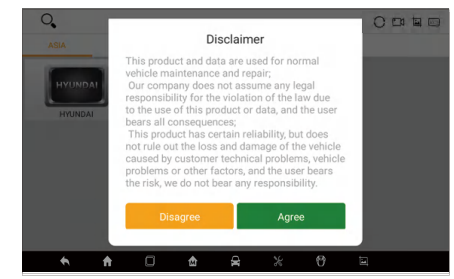

Figure 8-2 Sample Key Programmer Screen 2



Figure 8-3 Sample Key Programmer Screen 3

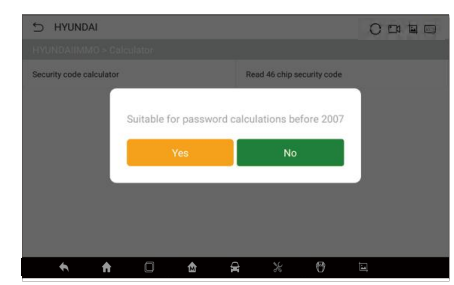

Figure 8-4 Sample Key Programmer Screen 4

9. App Store

You can download the model or function you need through the following steps:
On the "HUMZOR" main interface, click the "App Store" icon button, and the system will guide you to the "App Store" interface. If the "basic data" of your NEXZSYS application is not the latest, please click the "OK" button and the system will guide you to download the latest "basic data".

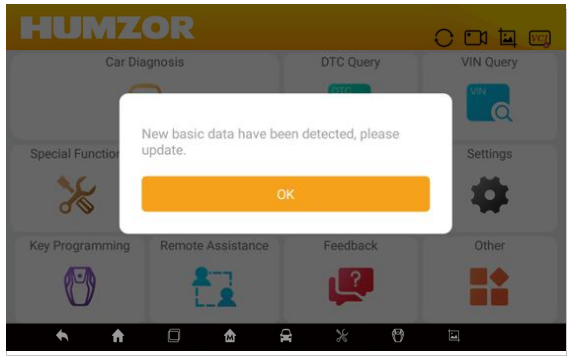

Figure 9-1 Sample Basic Data Screen

9.1 Vehicle DAS Download

You can download the car model through the following steps:

1. On the "App store" interface, click the "Vehicle" button at the top to display the Vehicle interface.
2. Click the car model icon, or click the icon button at the bottom left to select single or multiple car models.
3. If you need to find a certain car model, you can click the icon button at the top left corner and enter the car model name you need to search in the "Please enter a search" column. The system will automatically find the car model you entered.
4. Click the icon button at the bottom right to start downloading the model.
5. After the car model has been downloaded and decompressed, you can click the "Car Diagnosis" icon button on the "HUMZOR" main interface to start car model diagnosis.

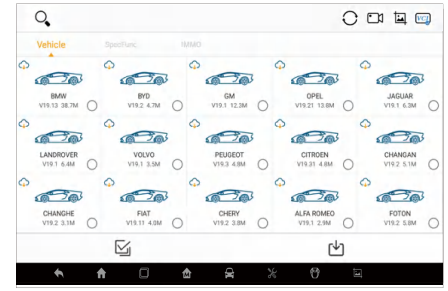

Figure 9-2 Sample Vehicle Model Interface

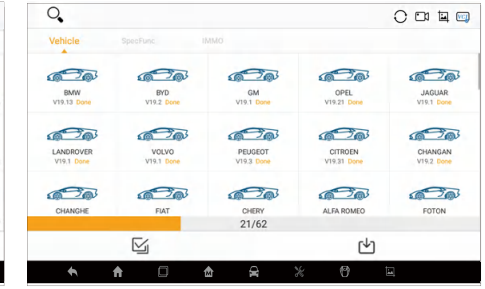

Figure 9-3 Sample Vehicle Model Download Interface

9.2 Special Function Download

You can follow the following steps to download special functions:

1. On the "App store" interface, click the "Special Function" button at the top to display the special function interface.
2. Click the function icon, or click the icon button at the bottom left to select single or multiple model functions.
3. If you need to inquire about a certain function, you can click the icon button in the upper left corner of the top and enter the name of the function you need to inquire in the "Please enter a search" column, and the system will automatically find the function you entered.
4. Click the icon button at the bottom right to start the download function.
5. After the special function is downloaded and decompressed, you can click the "Special Function" icon button on the "HUMZOR" main interface to enable the special function.

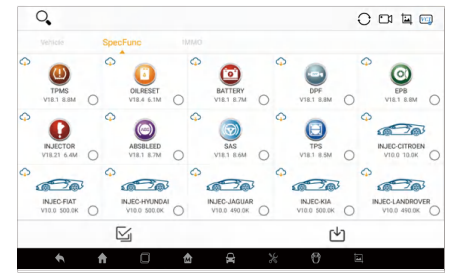

Figure 9-4 Sample Special Function Interface

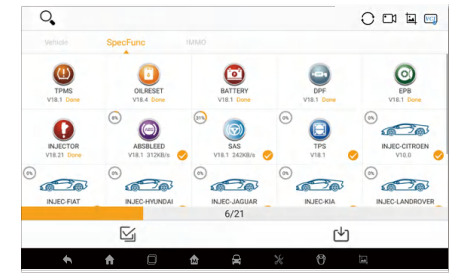

Figure 9-5 Sample Special Function Download Interface

9.3 Key Programming Download

You can download the IMMO function through the following steps:

1. On the "App store" interface, click the "IMMO" button at the top to display the IMMO function interface.
2. Click the car model icon, or click the icon button at the bottom left to select single or multiple car models.
3. If you need to find a certain car model, you can click the icon button at the top left corner and enter the car model name you need to search in the "Please enter a search" column. The system will automatically find the car model you entered.
4. Click the icon button at the bottom right to start downloading the model.
5. After the models have been downloaded and decompressed, you can click the "Key Programming" icon button on the "HUMZOR" main interface to start IMMO function.

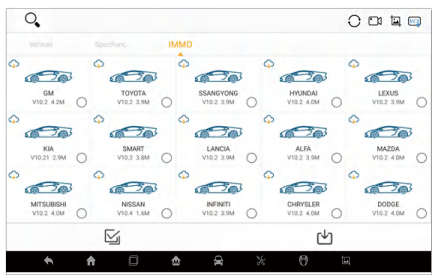

Figure 9-6 Sample IMMO Function Interface

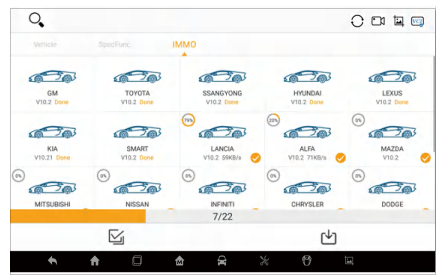

Figure 9-7 Sample IMMO Function Download Interfac

10.DTC Query

You can check the DTC through the following steps:

1. On the "HUMZOR" main interface, click the "DTC Query" icon button, and the system will guide you to the DTC query interface.
2. One-finger slide down to query the DTC you need to view, or enter the ID of the DTC you want to query in the "Searching Code" input box.
3. Click on the globe icon on the right to jump to the Google webpage and query the DTC of the corresponding ID.

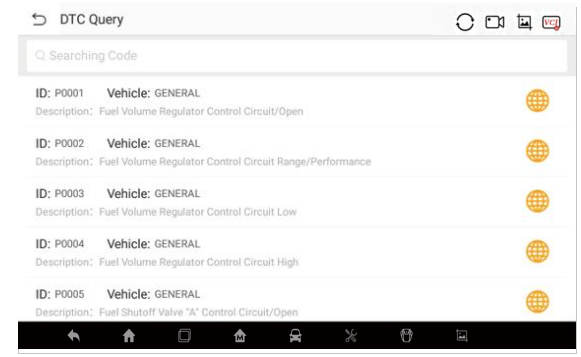

Figure 10-1 Sample DTC Query Interface

11.VIN Query

You can check the VIN through the following steps:

1. On the "HUMZOR" main interface, click the "VIN Query" icon button, and the system will guide you to the VIN query interface.
2. Enter the VIN you need to query in the input box, or click the icon on the right side of the input box to scan the code.
3. Click the "Search Vehicle Info" button, if the VIN you entered exists, the system will guide you to the vehicle information display interface.
4. Click the icon on the left of the input box, and the system will guide you to the interface which shows the historical VIN you have inquired.

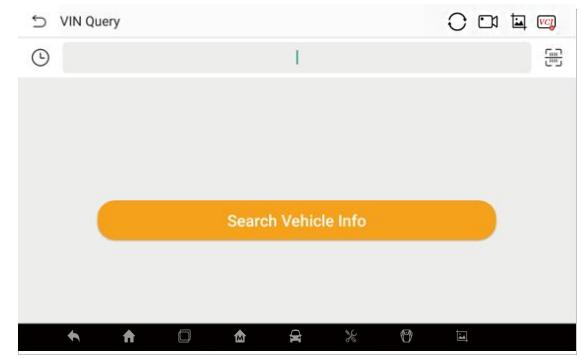

Figure 11-1 Sample VIN Query Interface

12.Personal

On the "HUMZOR" main interface, click the "Personal" icon button, and the system will guide you to the Personal interface.

12.1 Editing Personal Information

If you need to add or modify some personal information, you can operate it through the following steps:

1. On the Personal interface, click the "Personal Information" icon button.
2. Click the edit icon button at the bottom on the right to enable the editing function successfully, and you can add and modify Your Name, Email, Company, Nationality/Region, and Birthday.
3. After the addition and modification are completed, click the → icon button at the bottom right to complete the process

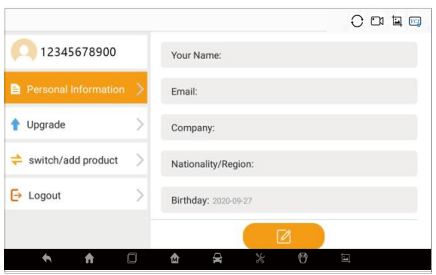

Figure 12-1 Sample Editing Personal Information Interface 1

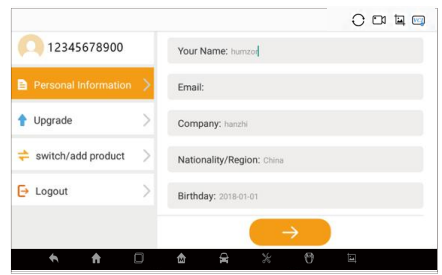

Figure 12-2 Sample Editing Personal Information Interface 2

12.2 Upgrade

If your NEXZSYS application is not the latest version, you can upgrade the application version through the following steps:

1. On the Personal interface, click the "Upgrade" icon button.
2. Click the "Download" button on the right to start downloading the new version.

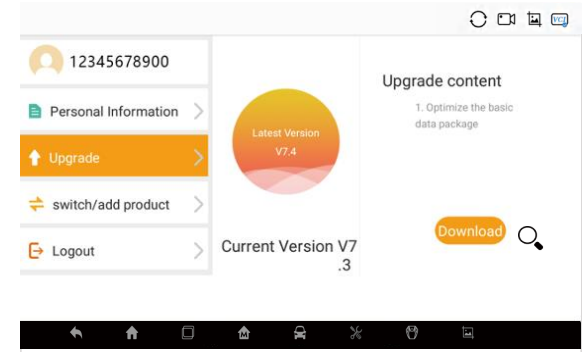

Figure 12-3 Sample Upgrade Interface 1

3. The version is downloaded successfully, click the "INSTALL" button to start the installation.

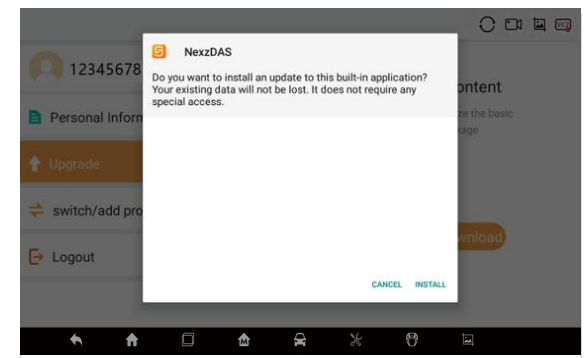

Figure 12-4 Sample Upgrade Interface 2

3. The version is downloaded successfully, click the "INSTALL" button to start the installation.

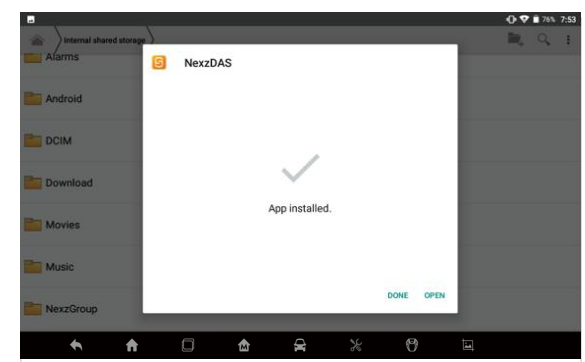

Figure 12-5 Sample Upgrade Interface 3

12.3 Product Serial Number Switch

If you need to switch the current product to another serial number, you can switch through the following steps:
On the Personal interface, click the "switch/add product" icon button, and the system will guide you to the product serial number switching interface.

12.4 Log Out

If you need to switch the current product to another serial number, you can switch through the following steps:
On the Personal interface, click the "switch/add product" icon button, and the system will guide you to the product serial number

12.5 Remote Assistance

If you need some remote assistance when using the NEXZSYS application, you can get help in the following ways:
1. On the "HUMZOR" main interface, click the "Remote Assistance" icon button.
2. If you have not installed the "TeamViewer: Remote Control" application, please click the "OK" button to download and install the TeamViewer application.

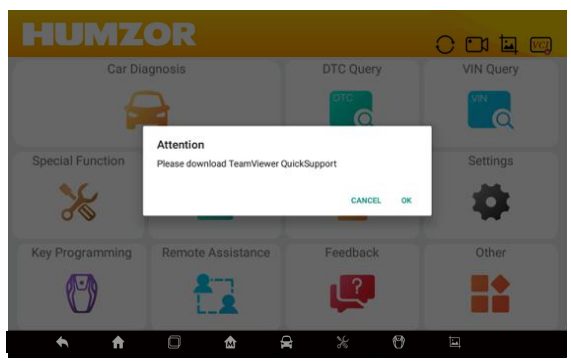

Figure 12-6 Sample TeamViewer

13.Feedback

If you need to feedback some problems when using the NEXZSYS application, you can use the following steps to feedback:
1. On the "HUMZOR" main interface, click the "Feedback" icon button, and the system will guide you to the feedback interface.

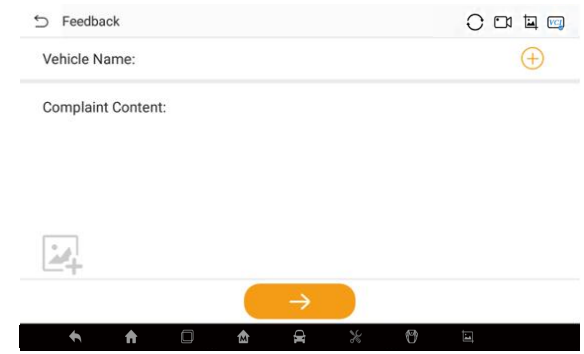

Figure 13-1 Sample Feedback Interface

2. On the Feedback interface, click the ⊕ icon on the right, and the system will guide you to the model and function module selection interface.

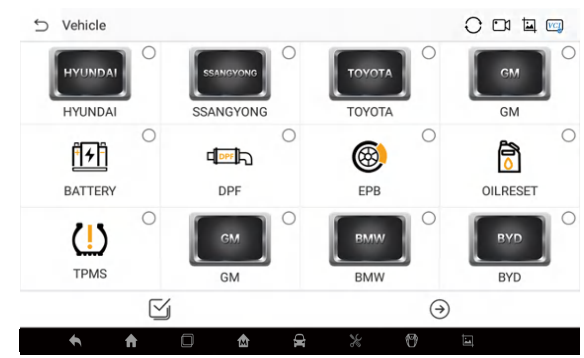

Figure 13-1 Sample Feedback Interface

3. Click to select, double-click to deselect, you can click the ☑ icon button on the left of the bottom tab bar to select all or cancel all.

4. After selecting the vehicle or function for which you need feedback, click the ⊕ icon button at the bottom right to successfully return to the Feedback interface.

5. Enter the content you need to feedback in the Complaint Content column.
6. Click the ⊕ icon button to upload your screenshot.
7. Click the button at the bottom, if your "Vehicle Name" and "Complaint Content" column input format are correct, then feedback succeeds

14.Settings

On the "HUMZOR" main interface, click the "Settings" icon button, and the system will guide you to the Settings interface.

14.1 System Info

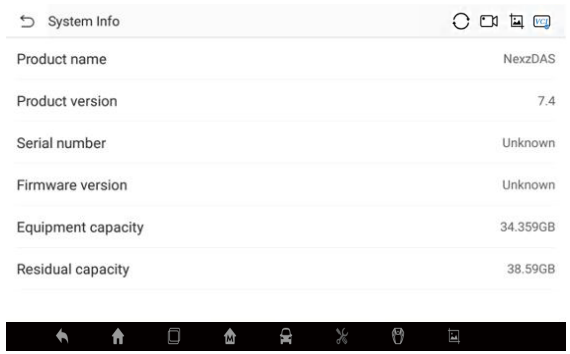

Figure 14-1 Sample System Info Interface

14.2 Units

In the Settings interface, click the "Units" button to switch the units.

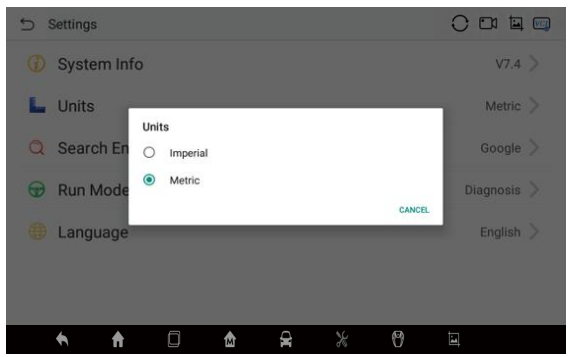

Figure 14-2 Sample Units Interface

14.3 Search Engine

In the Settings interface, click the "Search Engine" button to switch the

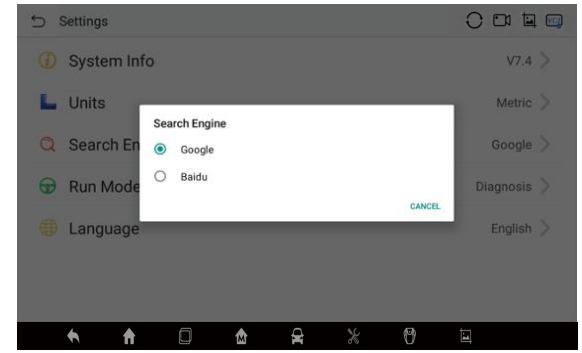

Figure 14-3 Sample Search Engine Interface

14.4 Run Mode

In the Settings interface, click the "Run Mode" button to switch between modes.

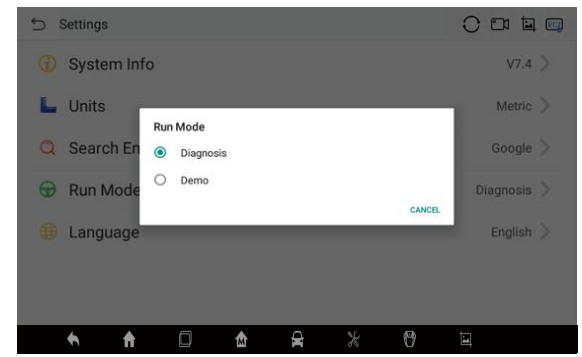

Figure 14-4 Sample Run Mode

14.5 Language

You can switch the display language through the following steps:
1. On the Settings interface, click Language, the system will guide you to the language selection interface
2. Click the language you need to display, the language switch setting completes.

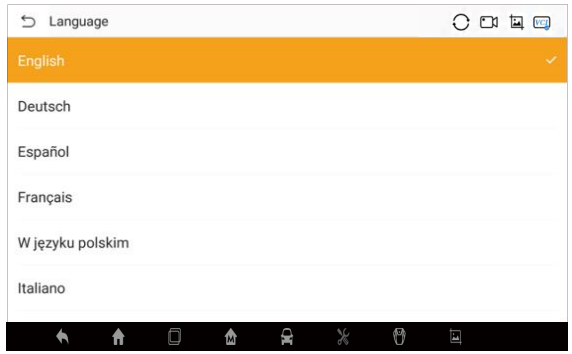

Figure 14-5 Sample Language Interface

15.Other

On the "HUMZOR" main interface, click the "Other" icon button, and the system will guide you to the other interface.

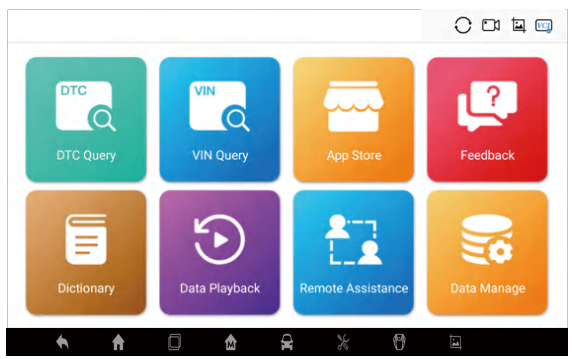

Figure 15-1 Sample Other Interface

15.1 Data Playback

Data stream playback function.

15.2 Data Manage

You can manage the downloaded models, functions, screen recordings, screenshots, etc. through the following steps:

1. On the Other interface, click the "Data Manage" icon button to enter the Data Manage interface.
2. If you need to manage the pictures captured in the NEXZSYS application, click the "Images" button on the left. Click the picture to zoom in and view the picture in full screen; click the selection box at the bottom right corner of the picture, or click the icon button at the bottom left to select single or multiple pictures. Click the icon button at the bottom right, and then click the YES button in the pop-up window to delete the picture successfully.

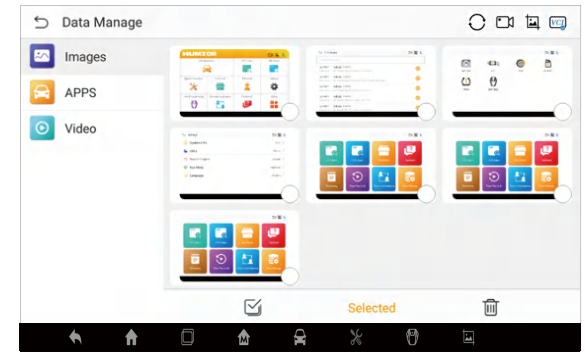

Figure 15-2 Sample Data Manage Interface

3. If you need to manage the models and functions downloaded in the APP store in the NEXZSYS application, click the "APPS" button on the left. Click the icon, or click the icon button at the bottom left to single or multiple selection of models and functions. Click the icon button at the bottom right and click the YES button in the pop-up window to delete the models or function successfully.

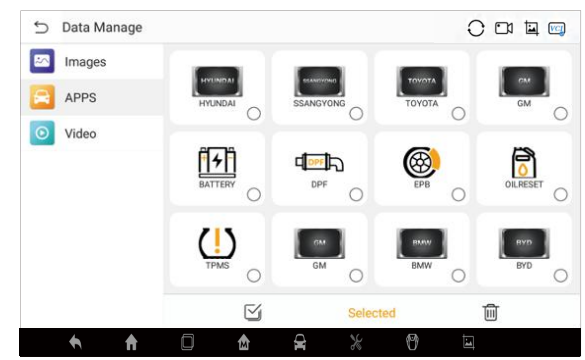

Figure 15-3 Sample Data Manage Interface 2

4. If you need to manage the videos recorded in the APP store in the NEXZ-SYS application, click the "Video" button on the left. Click the icon to play the recorded video; click the selection box in the upper right corner, or click the icon button at the bottom left to select single or multiple video. Click the icon button at the bottom right, and then click the YES button in the pop-up window, and the video is deleted successfully.

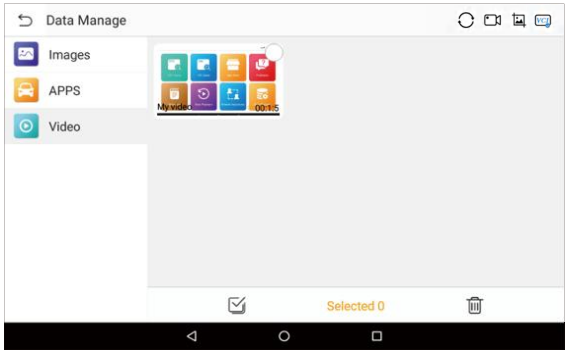

Figure 15-4 Sample Data Manage Interface 3

16.Navigation Bar

The buttons on the navigation bar from left to right are Screen recording、Screenshot、Bluetooth connection.

16.1 Record Video

When you use the NEXZSYS application, you can do the following steps to record video:

1. On the main interface of "HUMZOR", click the icon on the right side of the top navigation bar.
2. Click the "START NOW" button on the left of the pop-up prompt box.
3. Enter your file name and click the "OK" button to start recording video, and the screen recording icon changes to.
4. Click the icon, the video recording ends, and you can view it on the "Data Manage" interface.

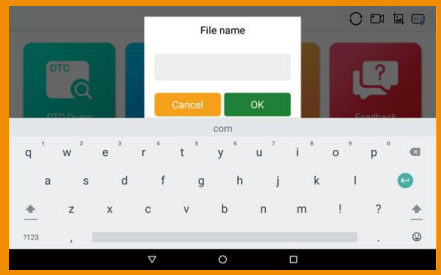

Figure 16-1 Sample Record Video

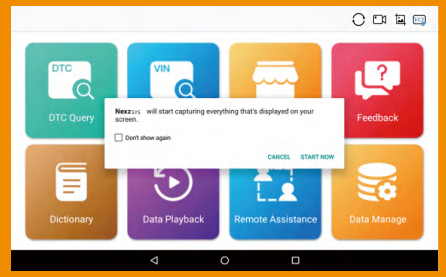

Figure 16-2 Sample File Name Input Prompt Box

16.2 Screenshot

When you use the NEXZSYS application, you can save a screenshot of the current interface through the following steps:
On the main interface of "HUMZOR", click the icon on the right side of the top navigation bar, the screenshot is saved successful, and you can view it on the "Data Manage" interface.

